


TOTAL JOINERY SUPPLIES

CUSTOM BUILT RESIDENTIAL AND COMMERCIAL JOINERY


ADD: 1/71 NORTHGATE DRIVE THOMASTOWN
 PH: (03) 94645111 FAX: (03) 9464 5145
 EMAIL: TOTALDESIGN1@BIGPOND.COM
 WEB: WWW.TOTALJOINERYSUPPLIES.COM.AU

SOLID TIMBER VANITIES


AVAILABLE SIZES (ISOMETRIC VIEW):

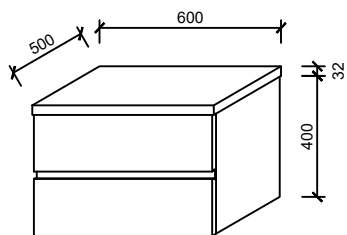


2DR600

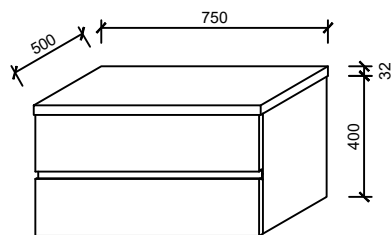


2DR750

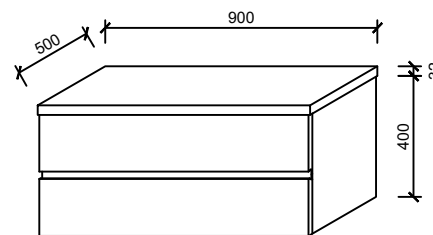


2DR900

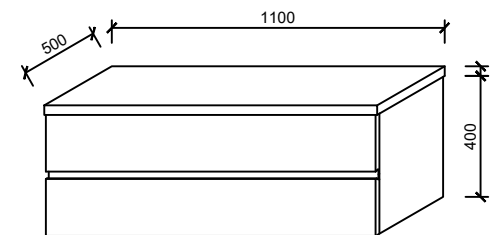


2DR1100

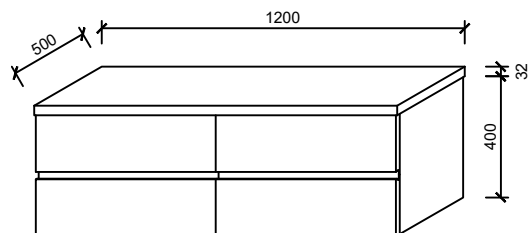

2x2DR600

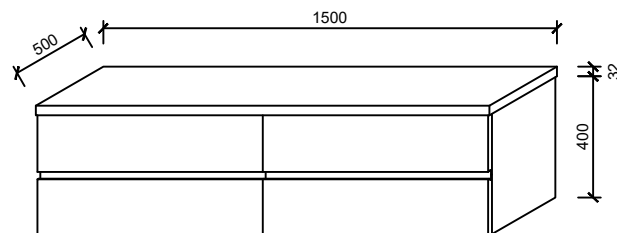

2x2DR750

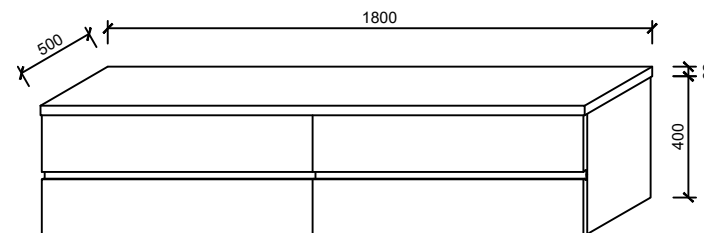

2x2DR900

AVAILABLE SIZES (TEXT):

2DR600	= 600MM OVERALL
2DR750	= 750MM OVERALL
2DR900	= 900MM OVERALL
2DR1100	= 1100MM OVERALL
2x2DR600	= 1200MM OVERALL
2x2DR750	= 1500MM OVERALL
2x2DR900	= 1800MM OVERALL

SPECIFICATION:

CARCASS (W): 16MM WHITE MELAMINE
 CARCASS (B): 16MM BLACK MELAMINE
 DRAWER FACES: 20MM SOLID TIMBER
 BENCHTOP (20): 20MM SOLID TIMBER
 BENCHTOP (32): 32MM SOLID TIMBER
 HARDWARE: BLUM LEGRABOX
 HANDLES: HOUSED FINGERPULL

INSTALLATION INSTRUCTIONS:

INSTALLATION MUST BE PERFORMED BY QUALIFIED PERSONNEL. ENSURE UNIT DOES NOT BUTT INTO WET AREAS, LEAVE MINIMUM 100MM. ENSURE UNIT IS NOT EXPOSED TO SHOWER SPRAY. ENSURE ROOM IS ADEQUATELY VENTILATED. CONSIDER DIRECT SUNLIGHT (THIS MAY CAUSE UNIT TO FADE OVER TIME). FIX UNIT DIRECT TO STUD WITH ONLY PLASTER OR CEMENT SHEET BETWEEN. DO NOT FIX TO TILES. ENSURE TOP AND BOTTOM FIXING TO EACH STUD. MINIMUM FIXING OF 2 STUDS FOR FIRST 600MM. FIX TO EVERY STUD AFTER 600MM AT MINIMUM OF 450MM CENTERS. CREATE ADDITIONAL SUPPORT IF EXISTING WALL CANNOT ACHIEVE REQUIRED SUPPORT. ENSURE WALL IS PLUMB, STRAIGHT AND LEVEL. ENSURE WASTE PIPE IS LOCATED BETWEEN THE CUT-OUT PROVISION. INSTALLER IS RESPONSIBLE FOR CORRECT INSTALLATION AND DRAWER FACE ALIGNMENT.

WARRANTY:

7 YEARS MANUFACTURERS WARRANTY
 WARRANTY INCLUDES REPLACEMENT OF FAILED HARDWARE OR DEFECTIVE JOINERY
 FAIR WEAR AND TEAR EXCLUDED
 WATER DAMAGE EXCLUDED
 DAMAGE/FAILURE DUE TO INCORRECT INSTALLATION OR INCORRECT USE OF PRODUCT EXCLUDED